


V BASE s[16]

INSTALLATION MANUAL

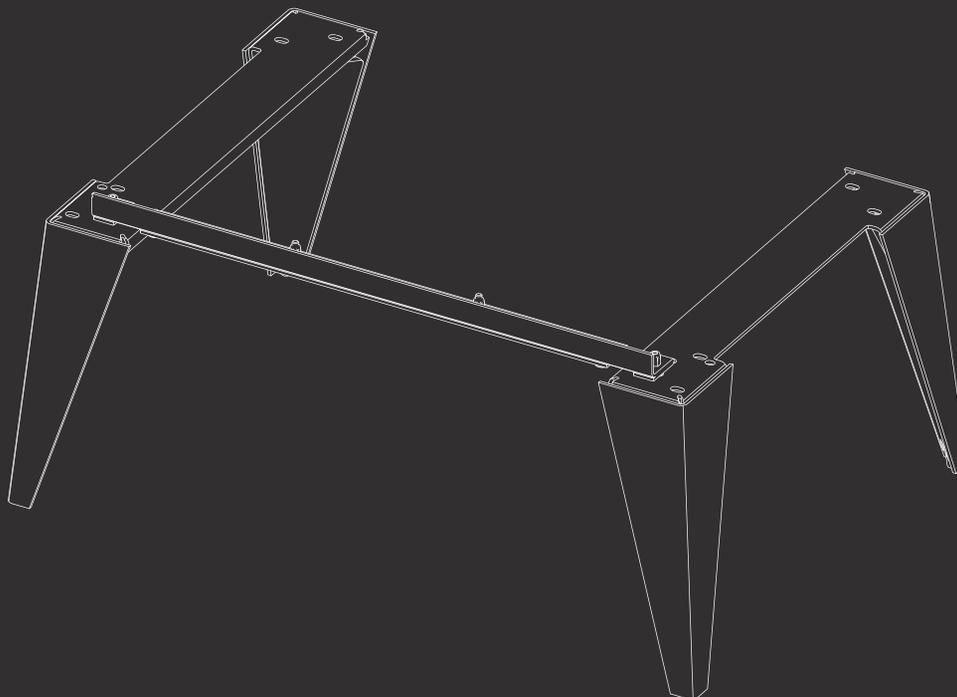

REQUIRED TOOLS



Drill driver



Level



Tape measure

REQUIRED HARDWARE



10 mm hex
bit socket



Torx 30
drill bit




IMPORTANT

This manual is complementary to the **s16-cube** installation manual and contains additional instructions that must be followed.

Look for this symbol in the **s16-cube** installation manual to know when to refer to this manual.


This item is compatible with s16-cube with a serial number A-004 707 and higher.

This item is incompatible with the s16's family floor plate.

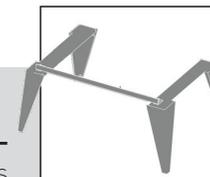

1

DIMENSIONS

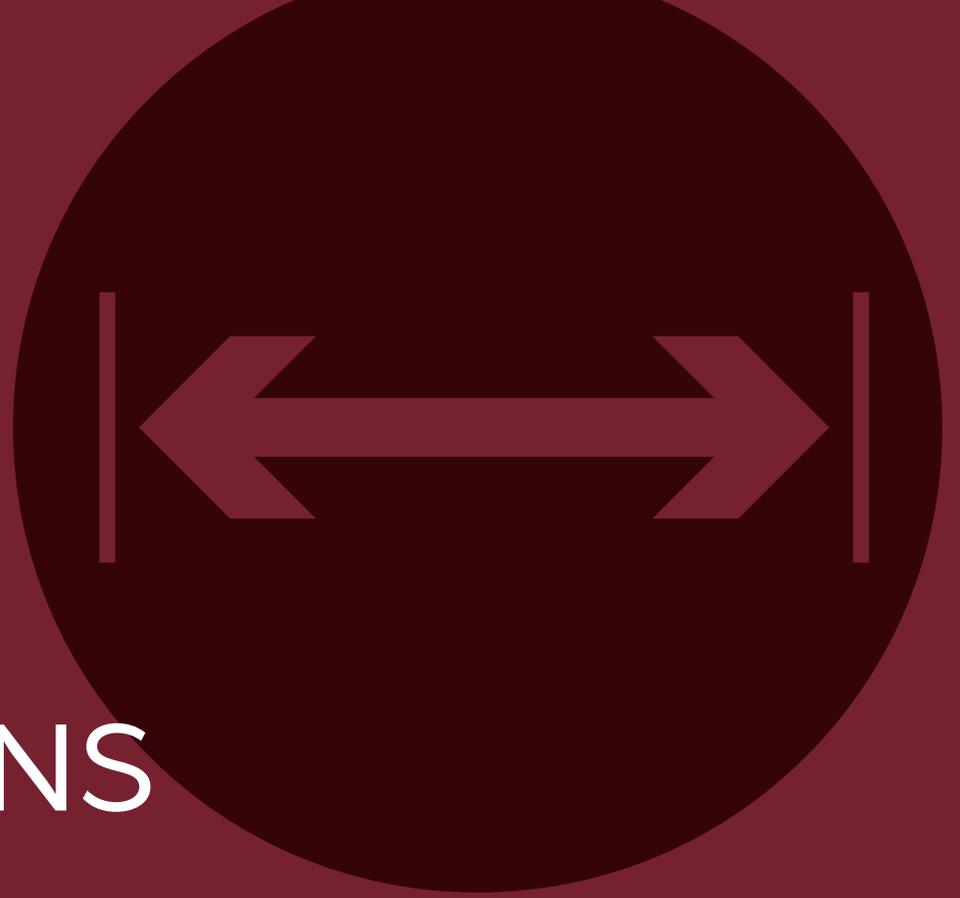


1.1 DIMENSIONS

1.2 EXPLODED VIEW




FRONT VIEW


RIGHT VIEW

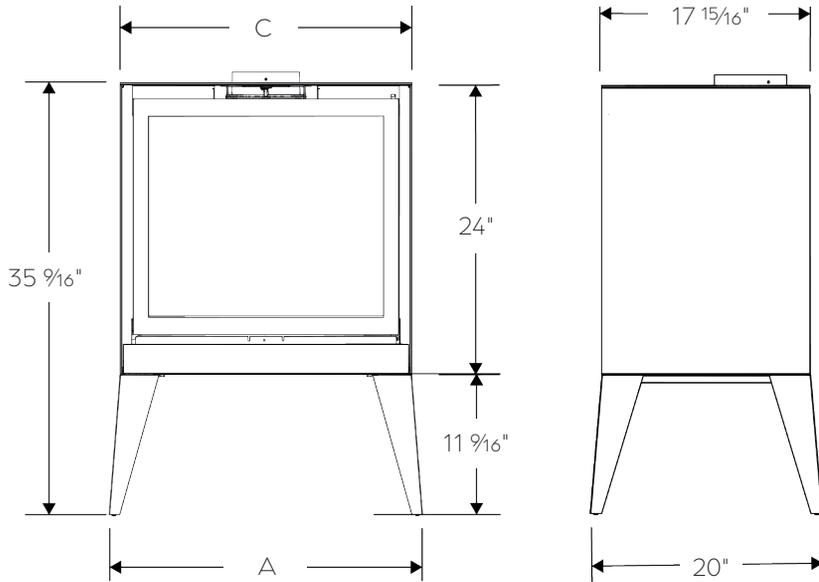

BOTTOM VIEW

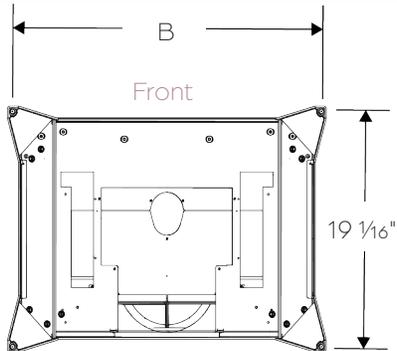

MODEL	STÛVGREY	STÛVBLACK	A	B	C
58	10161305	10161304	24 13/16"	23 15/16"	22 7/8"
68	10161415	10161414	28 13/16"	27 15/16"	26 3/4"
78	10161515	10161514	32 13/16"	31 15/16"	30 3/4"

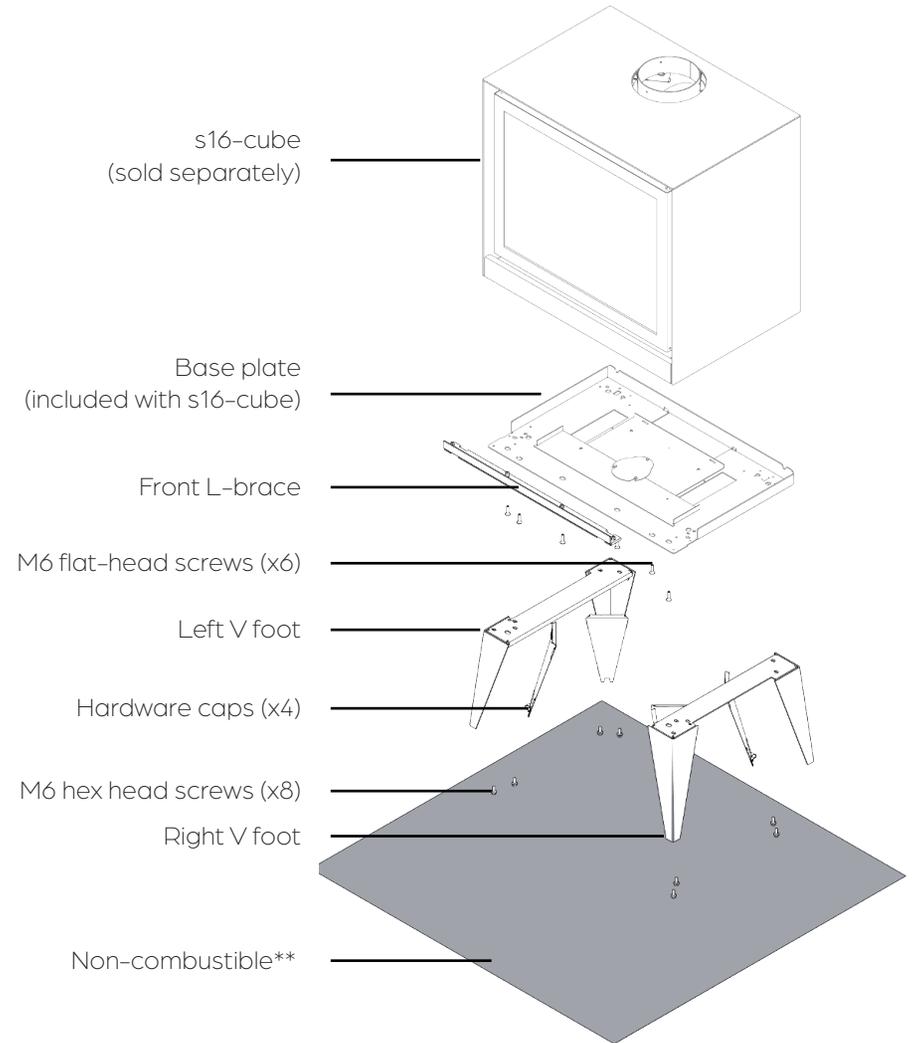

**The grey area delineates the non-combustible area. It must remain free of any combustible materials or objects. Refer to the s16-cube installation manual for details. This zone is 43" of depth and have a minimum of 8" on each side of the unit.

2

INSTALLATION





! IMPORTANT

The paint is fragile. Take care not to scratch the unit.

Step 1 Open the accessory box and check that all the items are present.

Step 2 Turn the unit base plate (included with the s16-cube) over to access the underside.

! BÂTIMENT TRANSPORTABLE

Il est **obligatoire de fixer l'appareil la base de manière permanente** à son emplacement final si ce poêle est installé dans un bâtiment transportable.

Ne pas mettre les pieds niveleurs si l'installation est en bâtiment transportable.


Step 3 Position the legs on the base plate.

Step 4 Insert the M6 hex head screws. Do not screw them in fully, to allow for adjustment. You will screw them in fully once the assembly is complete.


Step 5 Turn the assembly over and position it to its final location. A final adjustment may be needed once the combustion chamber is in place.

1 BOX CONTENT


1. Allen key
2. Installation manual
3. Front L-brace
4. Left V leg
5. Right V leg
6. 4x hardware caps
7. 6x M6 flat-head screws
8. 8x M6 hex head screws

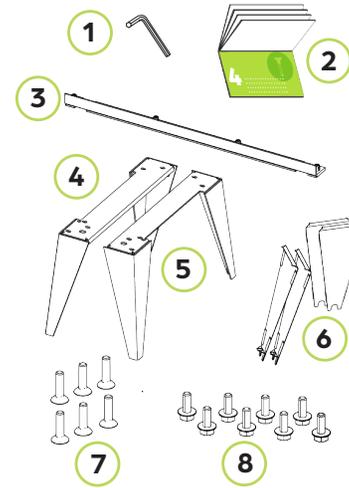


2

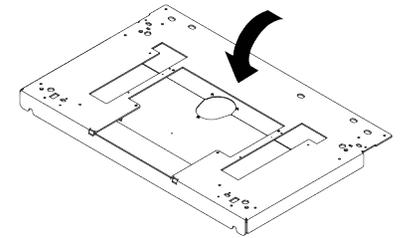


3

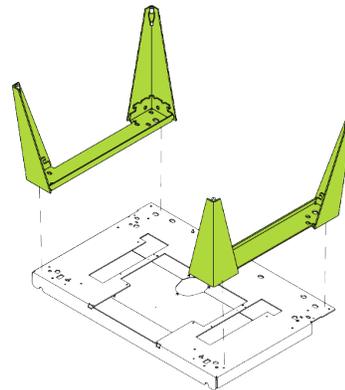

4

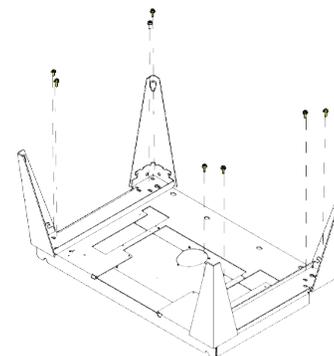

5

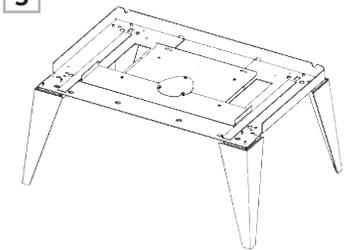

! IMPORTANT

Be sure to lift the base when moving it, as dragging it could scratch the floor.



Step 6 If necessary, use a laser to align the plate with the smoke outlet. The pin hole on the trap indicates the middle of the outlet.

Step 7 Level the feet using the Allen key provided. Check that the base is level at the front and back.

For transportable buildings only, the base will be secure at the next page.



CAUTION

Make sure the positioning respects the safety standards indicated in the 16-cube installation manual.

Step 8 Place the stove (with its cube shell, without its door) on the base. Confirm the positioning by checking the tenons in the mortises.



Step 9 Affix the cube shell and the base from under it with the four screws provided in the complementary box.

Step 10 Place the front L-brace between the two sides of the front flap support. Then, screw the M6 flat head screws under the base plate.



CAUTION

If the base is not level (front and back), the combustion chamber could be unstable. If necessary, remove the combustion chamber and level the base, as shown in step 7, before proceeding with the installation.

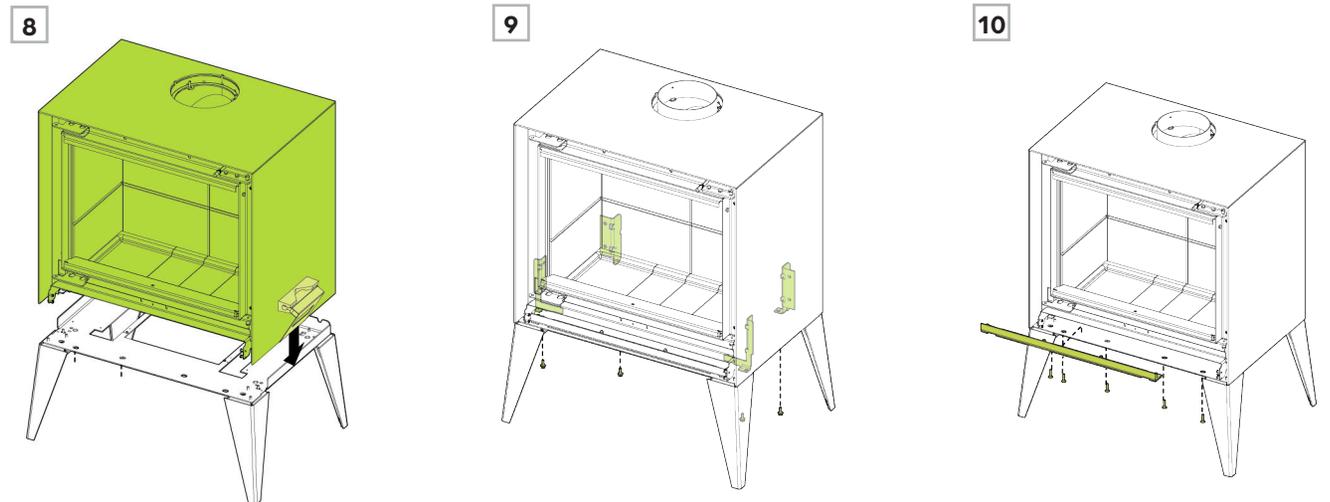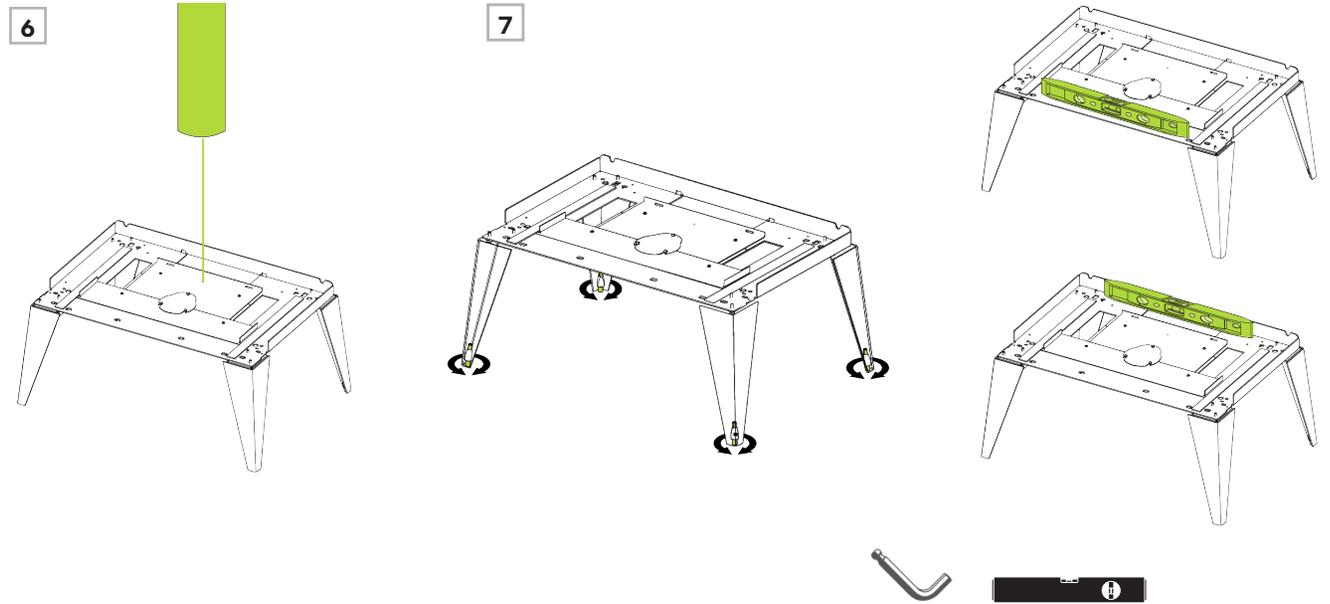



Step 11 One side at a time, unscrew the hexagonal head screws, the screws installed at step and the flat head screw at the end of the L-brace by one turn. This will allow you to adjust the legs with the cube shell.

Check the adjustment of the leg with the shell to make sure everything is aligned. Tighten all the screws once the adjustment is complete. Repeat this step for all legs.



TRANSPORTABLE BUILDING

Confirm that the ground is level. Do not install the leveling feet. Use the foot holes to secure the base.

Step 12 Install the four hardware caps.

Slide the bottom of the hardware cap over the conical part at the bottom of the leg.

Rotate the top of the hardware cap so that the tabs rest in the hook of the leg. Press down to make sure the part is firmly affixed in the upper hooks and firmly seated against the lower part.



Complete the installation by referring to the s16-cube installation manual.




IMPORTANT

The steps to install the front flap and the door can be found in the s16-cube installation manual. Refer to it to finish installing the appliance.




11

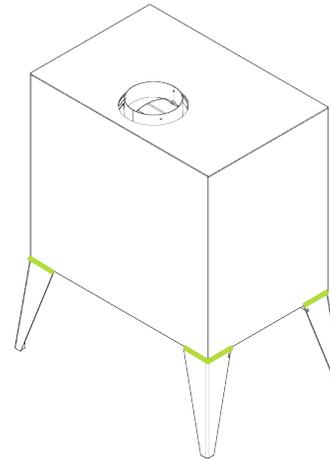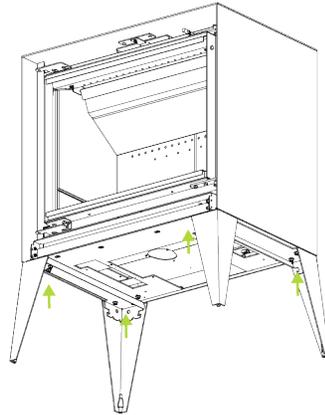

TRANSPORTABLE BUILDING

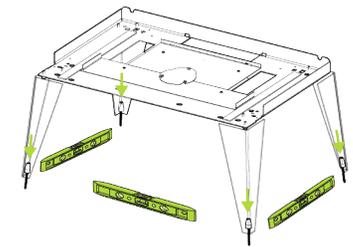

12

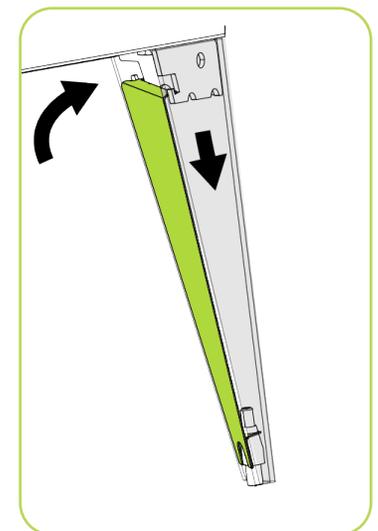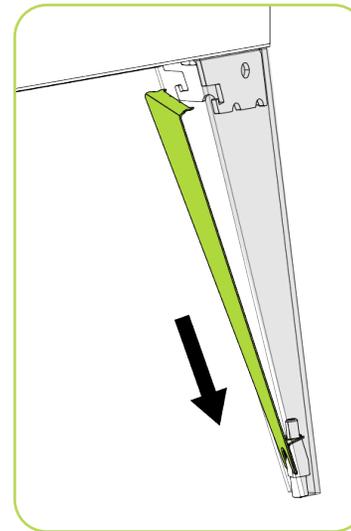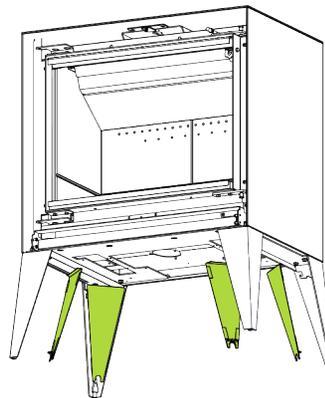



Stûv fireplaces are designed by:

Stûv sa – Belgique
stuv.com

Rue Jules Borbouse n°4 B-5170
Bois-de-Villers

This accessory is designed and
manufactured in North America by:

Stûv America inc. – Canada
stuvamerica.com

34, Boulevard de l'Aéroport
Bromont QC Canada J2L 1S6

1-514-396-3463 | 1-866-487-7888