

REQUIRED MATERIAL



Standard silicone
liquid glue




IMPORTANT


This document is an additional manual to the **s30C** installation manual. For a successful installation, it is important to carefully follow these instructions, as well as those in the **s30C** installation manual.



FP1 – Rotation 0°

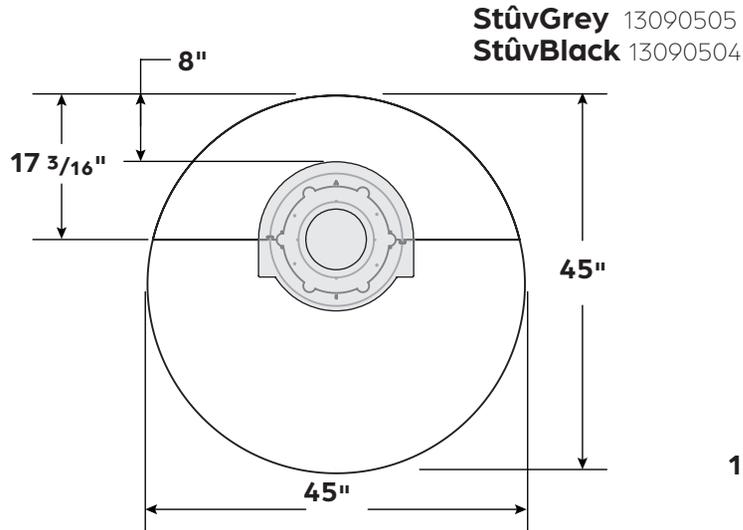


FP2 – Rotation 90°

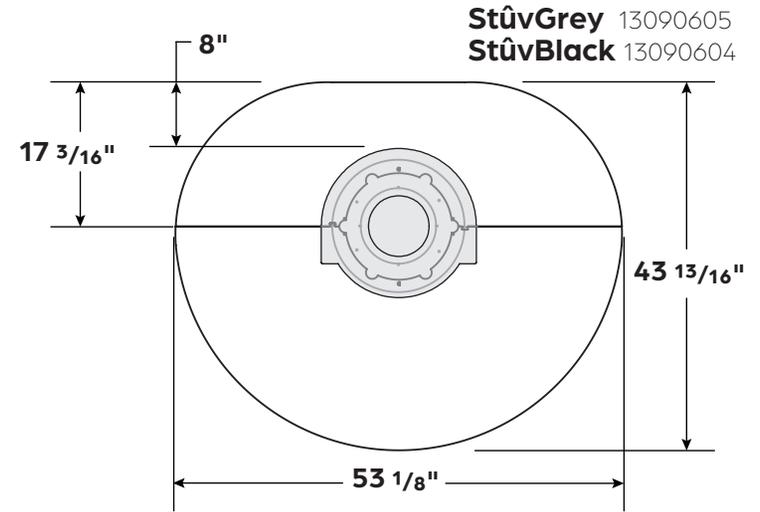


Thickness
14 gauge | 0.0747"

FP3 – Rotation 180°

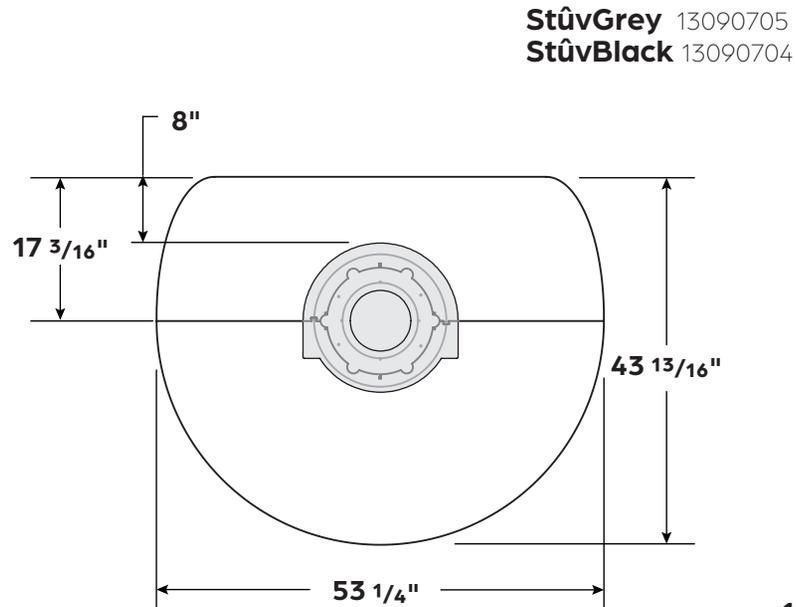

FP4 – Rotation 360°

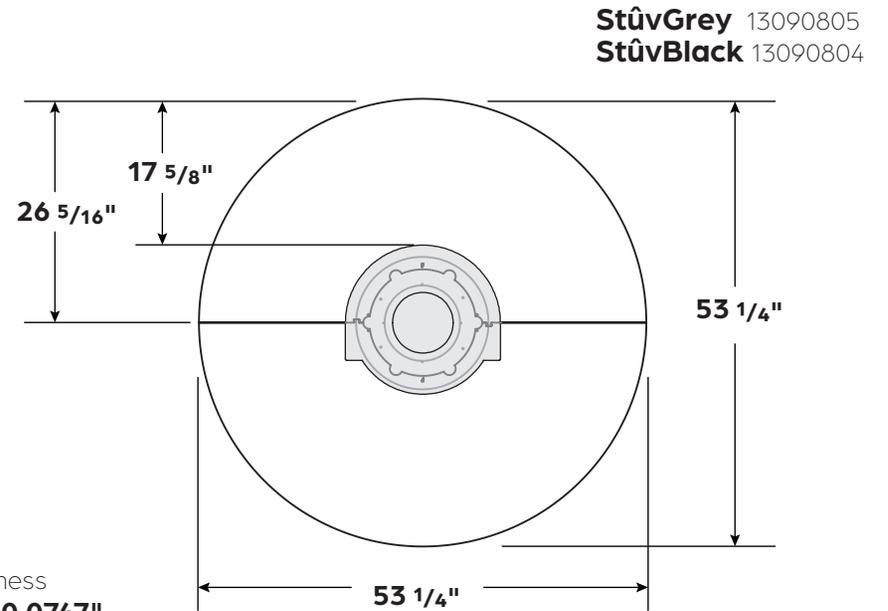

Thickness
14 gauge | 0.0747"



Step 1 Install the center plate at the final location of the stove. Use a laser and the notches on the plate to align it to the center of the smoke outlet. Secure the plate with #8 wood screws.

Step 2 The floor plate is a finishing accessory that is put in place after the s30C has been installed. The stove therefore needs to be set up and connected first.

Step 3 Clean the surface around the s30C where the floor plate will be installed.





FRAGILE

When handling the plate, remove any accessories or other that could damage the paint (belt, ring, tools, etc.).

Step 4 Place the two parts at the front and back of the stove and connect them like puzzle pieces.

Step 5 Slightly lift each part separately to apply standard silicone liquid glue to different spots. Apply a reasonable amount to keep it from oozing out.

Step 6 To make sure the floor plate is level, add heavy items to flatten the silicone. Leave for the entire drying period recommended in the silicone's instructions.

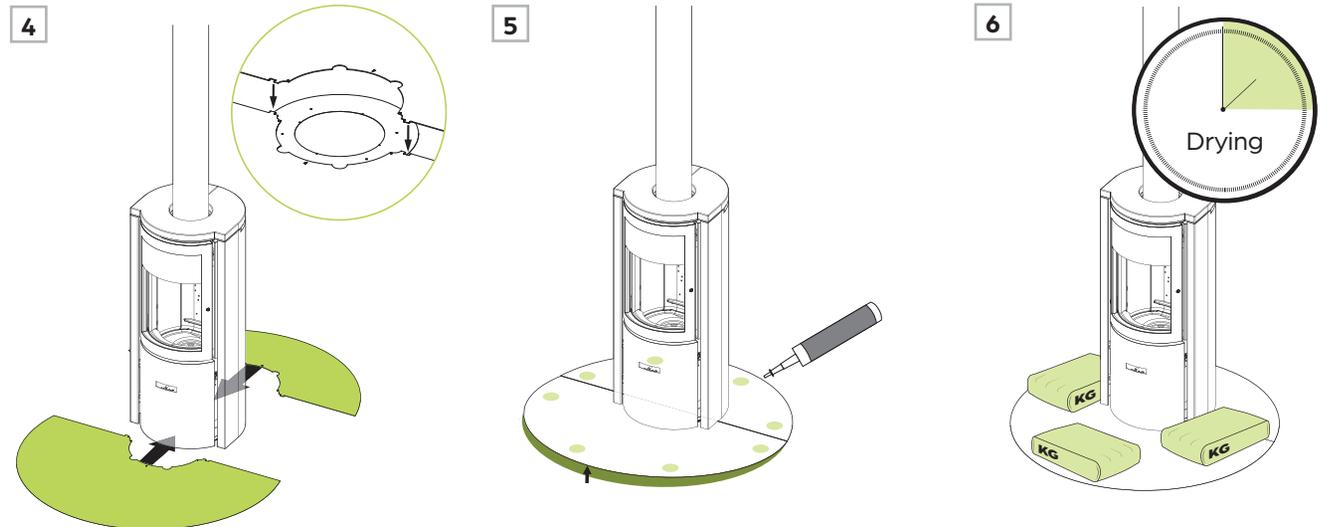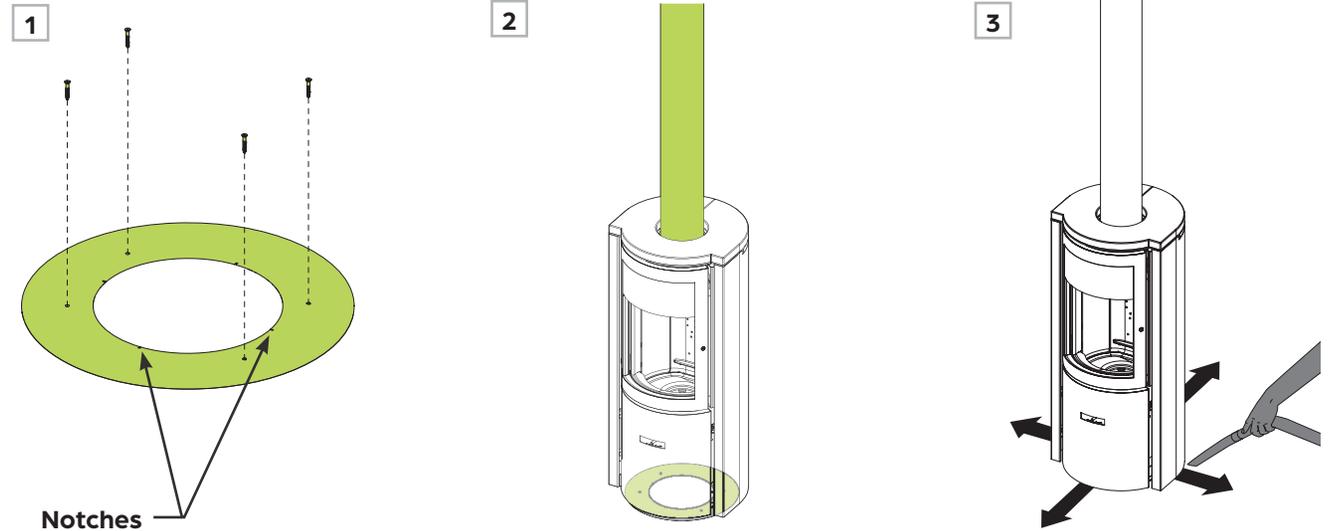



Stûv fireplaces are designed by:

Stûv sa – Belgique
stuv.com

Rue Jules Borbouse n°4 B-5170
Bois-de-Villers

And manufactured in North America by:

Stûv America inc. – Canada
stuvamerica.com

34, Boulevard de l'Aéroport
Bromont QC Canada J2L 1S6

1-514-396-3463 | 1-866-487-7888